
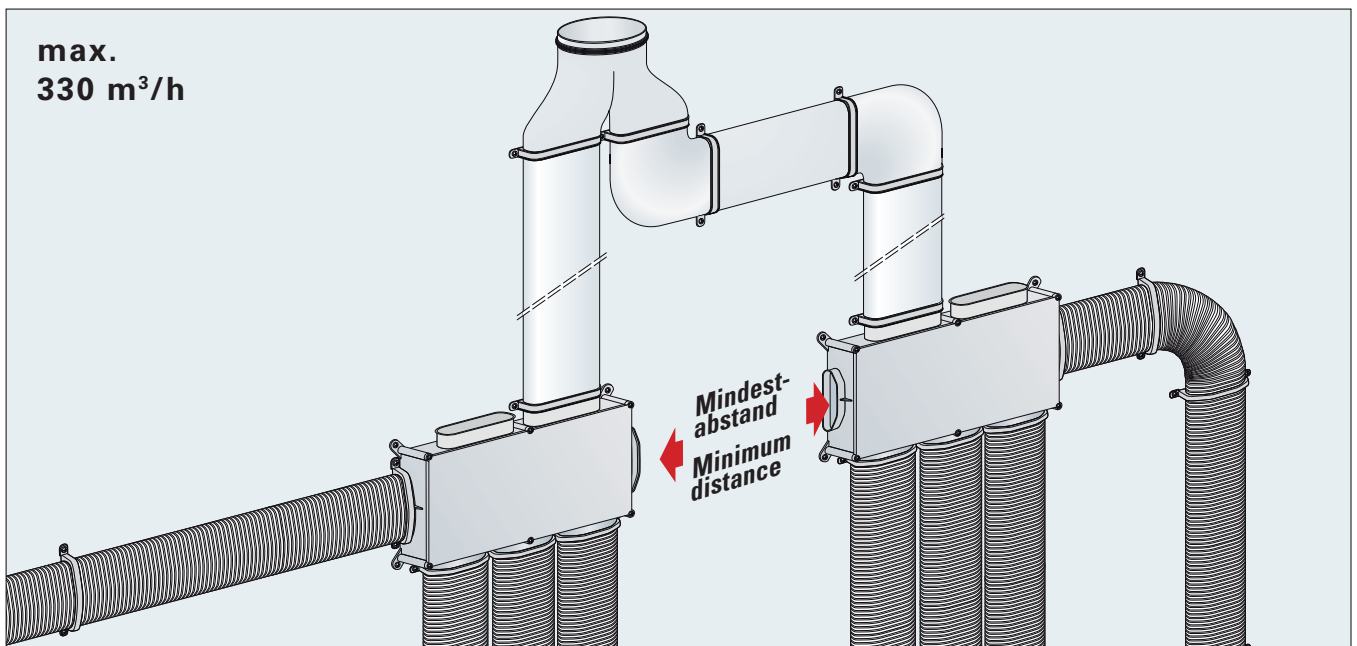
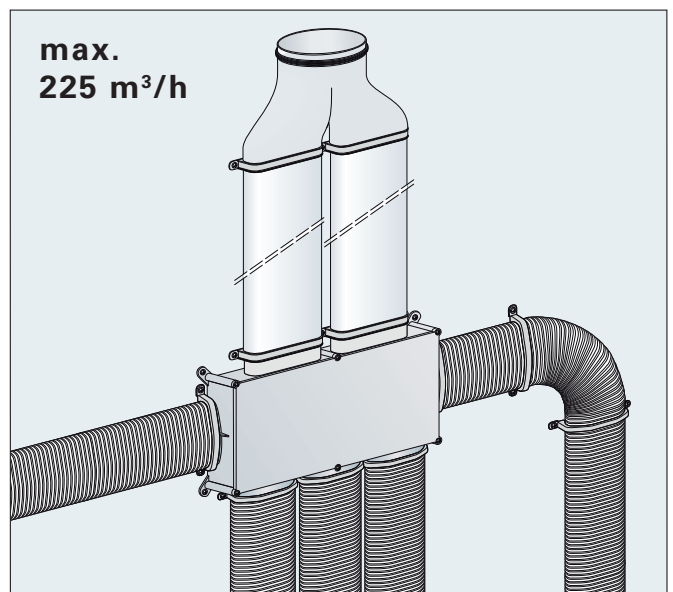
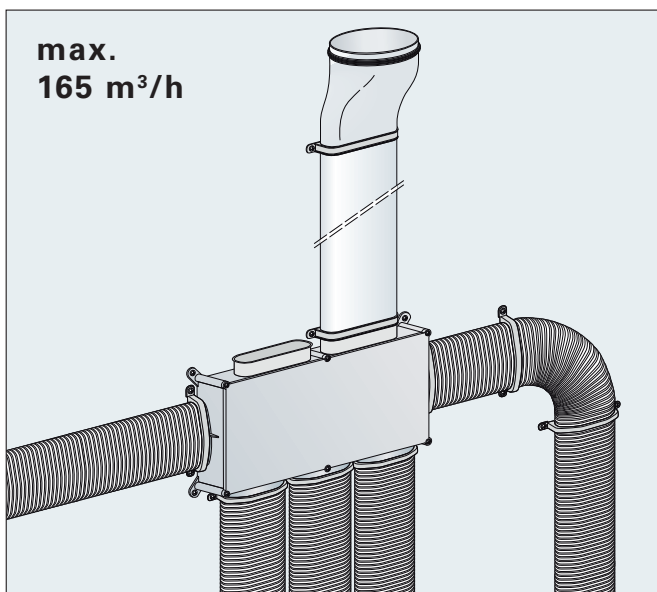


Montageanleitung / Mounting instructions

profi-air® tunnel/Ovalkanal



Mindestabstand

profi-air tunnel Bogen 90°

- einseitige Belegung → 30 cm
- beidseitige Belegung → 60 cm

profi-air tunnel Rohr 132 x 52 gebogen

- einseitige Belegung → 45 cm
- beidseitige Belegung → 90 cm

Minimum distance







profi-air tunnel bend 90°

- connection on one side → 30 cm
- connection on both sides → 60 cm



profi-air tunnel pipe 132 x 52 bend

- connection on one side → 45 cm
- connection on both sides → 90 cm







1

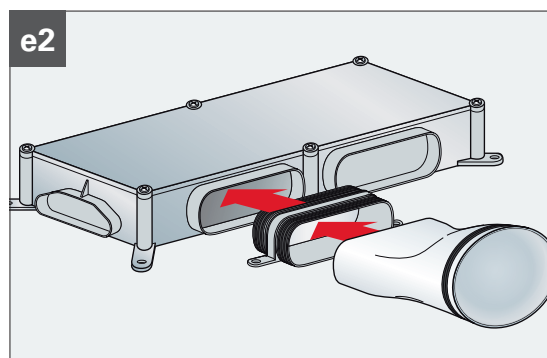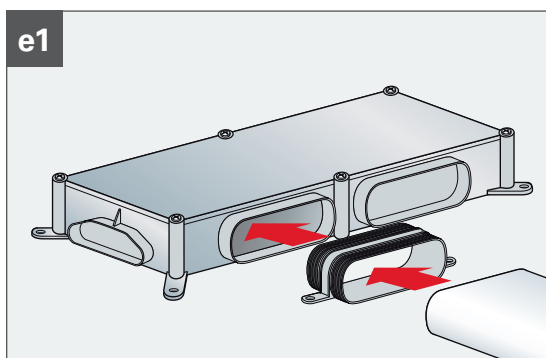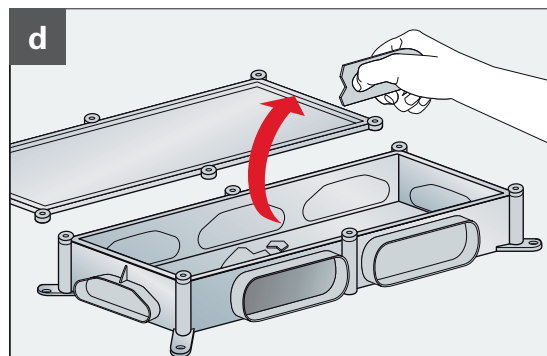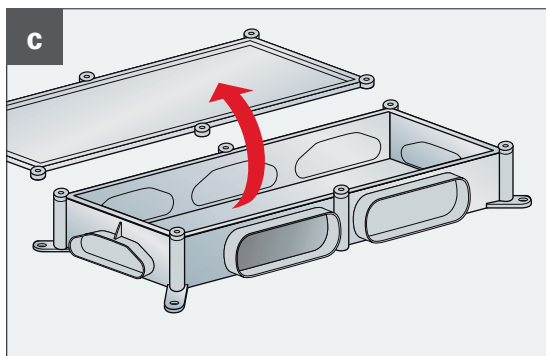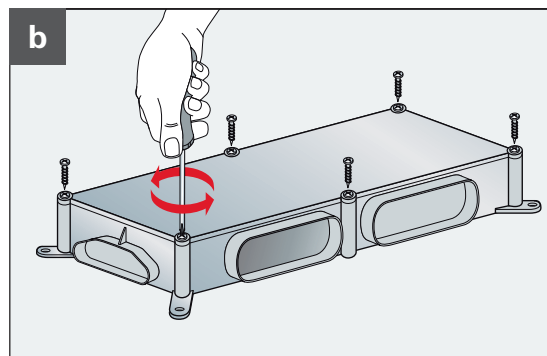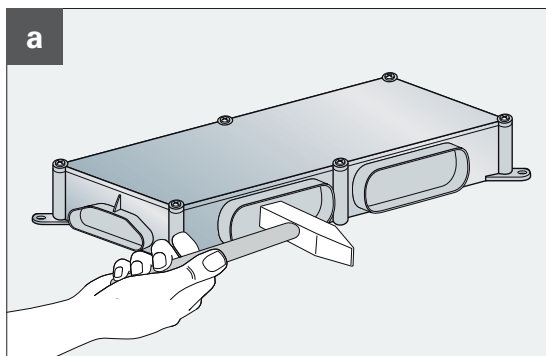

2

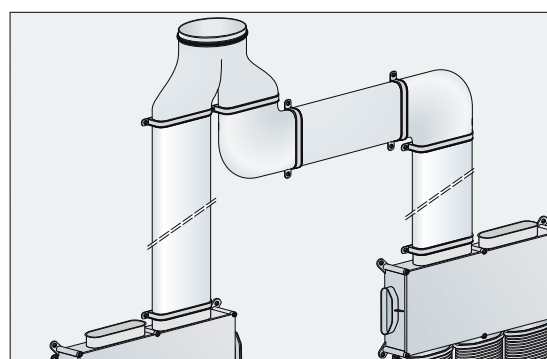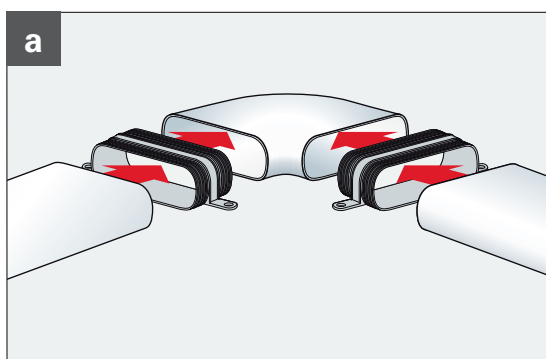

3

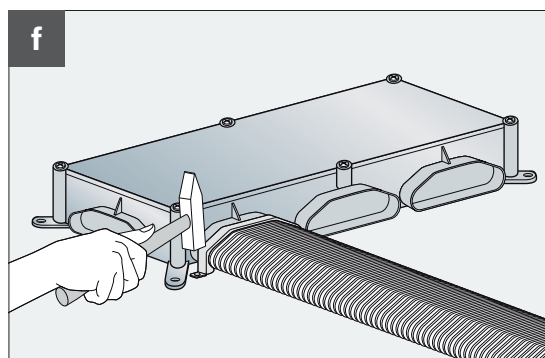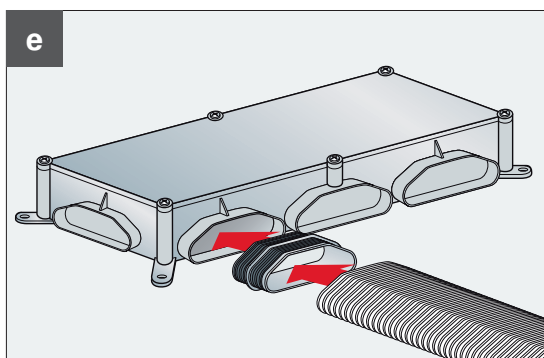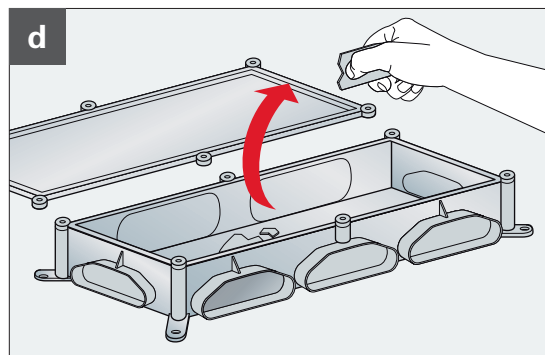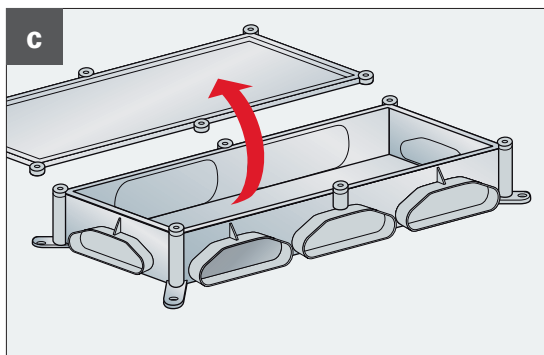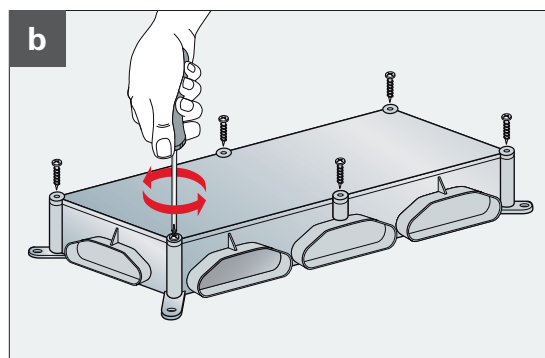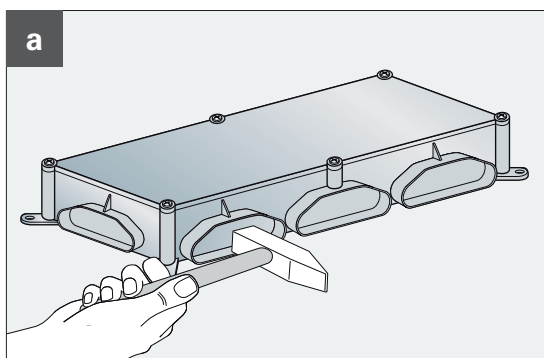

4

